



**Speaker in Zeck cabinets updated: 21.4.99**

Order code	MS12.1	MS15.1	AMS 1502L	CLUB12.HT	CLUB15.1	CLUB15.MHT	CLUB212.1	CLUB212.1 from	Sr: XC2119820300	CLUB15.SUB	CLUB18.SUB	ASP28.1 / F28.1	ASP10.1 / F10.1	ASP12.1 / F12.1	ASP15.1	ASP212.2	ASP215.2	DCA 501	SUB15	SUB18	SUB18E	TSW 28	PAS15.MHT	FOCUS 1222	FOCUS 1202	FOCUS 21022	FOCUS 21522	FOCUS 115	FOCUS 215	FOCUS 118	FOCUS 218			
HD 2002			1										1	1	1										1									
HD 2003							1					1																						
HD 2004	1	1			1		1																											
HD 2025				1		1																		1										
HD 802																										1	1							
HD 803																1	1																	
HD 804																									1									
CDH 9.6			1		1		1	1					1	1											1									
CDH1.96F												1	1																					
CDH 2.64																											1	1						
CDH 2.64F																1	1								1									
WG1.S	1	1																																
PM 250																								1										
PM 8017												2											2											
CM 850						1																												
LB 1202	1			1			2	2																										
LB 1502		1			1	1																												
LB 1804											1																							
PW 1003/16																																		
PW 1003													1																					
PW 1203																2									1									
PW 1230														1												1								
PW 1503										1														1										
PW 1506																	2											2	1					
PW 1507																			1												2			
PW 1545			1												1																			
PW 1807																		1		1														
PW 1808																						1										1	2	