

Part list for d.a.i.sy UHF Series (includes: DS800.Bx; VDS800.Bx)

Item	Zeck order code
90 DEGREES CORNER UHF ANTENNA	DSUANTWINKEL
ANTENNA CORNER 90 DEGREES	DSUANTWINKEL
ANTENNA FOR DS800 RECEIVER	DS800ANTENNE
BACK- and FRONT COVER FOR UHF	DSURAHMEN
CASE (ALUMINIUM) FOR UHF+A3	DSURECGEH
CORNER UHF ANTENNA	DSUANTWINKEL
DAISY BATTERY COVER	DSBATTDECKEL
DC CONNECTOR FOR UHF RECEIVER	DSUDCBUCHSE
FRONT- AND BACK COVER FOR UHF	DSURAHMEN
GAINPOT SHAFT WHITE DAISY	DSGAINACHSE2
HOUSING (ALUMINIUM) FOR UHF RECEIVER	DSURECGEH
JACK 6,3mm FOR PHONE ON UHF	DSUPHONEBUCHSE
JACK SOCKET 6,3MM UHF RECEIVER	DSUKLINKE
KNOB PHONE VOL ON UHF RECEIVER	PK-DSU
OUTPUT VOL POT ON UHF RECEIVER	POTI-DSUOUT
PHONE VOL KNOB ON UHF RECEIVER	PK-DSU
PHONE VOLUME POT FOR UHF	POTI-DSUPHONE
POT KNOB PHONE VOL ON UHF RECEIVER	PK-DSU
POT OUTPUT VOL ON UHF RECEIVER	POTI-DSUOUT
POT PHONE VOLUME FOR UHF	POTI-DSUPHONE
POWERSUPPLY UHF RECEIVER 230V	DSUNT230V
RECEIVER DS800.B1 (FOR EXCHANGE)	DS800TREC.B1
RECEIVER DS800.B2 (FOR EXCHANGE)	DS800TREC.B2
RECEIVER VDS800.B1 (FOR EXCHANGE)	VDS800TREC.B1
RECEIVER VDS800.B2 (FOR EXCHANGE)	VDS800TREC.B2
SCREWDRIVER 2x40 FOR DAISY	DSSD-KLEIN
SERVICEMANUAL FOR DS800 and VDS800	SM-DS/VDS800
SWITCH 16 STEPS UHF RECEIVER	DSUREC16STEPS
SWITCH 16 STEPS UHF TRANSMITTER	DSUSEND16STEPS
TRANSIM. UHF SHELL LED SECTION	DSUGEHLED
TRANSMITTER (FOR EXCHANGE)	DS800TSEND.B1
TRANSMITTER (FOR EXCHANGE)	DS800TSEND.B2
TRANSMITTER SHELL LED SEC.	DSGEHLEDBZT
TRANSMITTER SHELL XLR SEC.	DSGEHXLR

For parts which are not included in the list and which cannot be purchased from an electronic parts dealer please always give us the following ordering details:

- quantity
- part name
- function of the part
- PCB carrying the part
- name of Zeck device

Example:

5 pcs. MJL1302 power transistor output board PT9 amplifier